

Assembly instructions

Assembly packing list

Width 600mm

Screw M5 Screw M6 Door pin Screws M8 Handle lock Wheels Feet

Top cover Bottom Side panel Rear door Glass door Frame Vertical mounting profiles Horizontal rails

Width 800mm

Bracket Doorstop Rail support

Split door & door pin

Step 1: Fix the top cover and bottom on frames with M8 screw; Fix the wheels on bottom panel.

Top cover **Bottom** **Wheels**

M8 x 8sets M8 x 8sets M5 x 16pcs

Step 2A: (For width 600mm cabinet) Fix vertical mounting profiles and horizontal rails with M5 screw.

Upper and bottom rails Fix upper and bottom horizontal rails at the third round hole as picture, each with 8pcs M5 screws.


Middle rail Fix the middle horizontal rail at the sixth round hole from the location without square hole.

Fix 4 vertical mounting profiles on the horizontal rails, each with 3pcs M5 screws.

M5 x 8pcs

Assembly instructions

Step 2B (if width 600mm cabinet please skip this step): Fix width 800mm cabinet bracket and rails

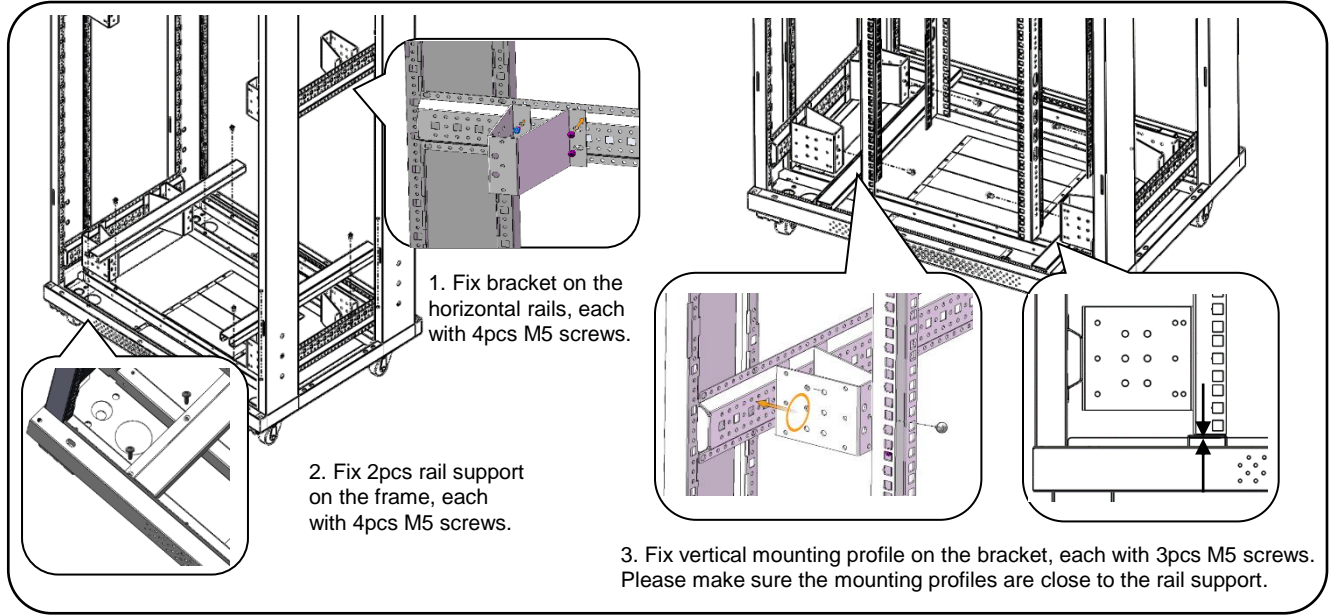


1. Fix bracket on the horizontal rails, each with 4pcs M5 screws.

2. Fix 2pcs rail support on the frame, each with 4pcs M5 screws.

3. Fix vertical mounting profile on the bracket, each with 3pcs M5 screws. Please make sure the mounting profiles are close to the rail support.


Step 3: Fix doors and side panels;

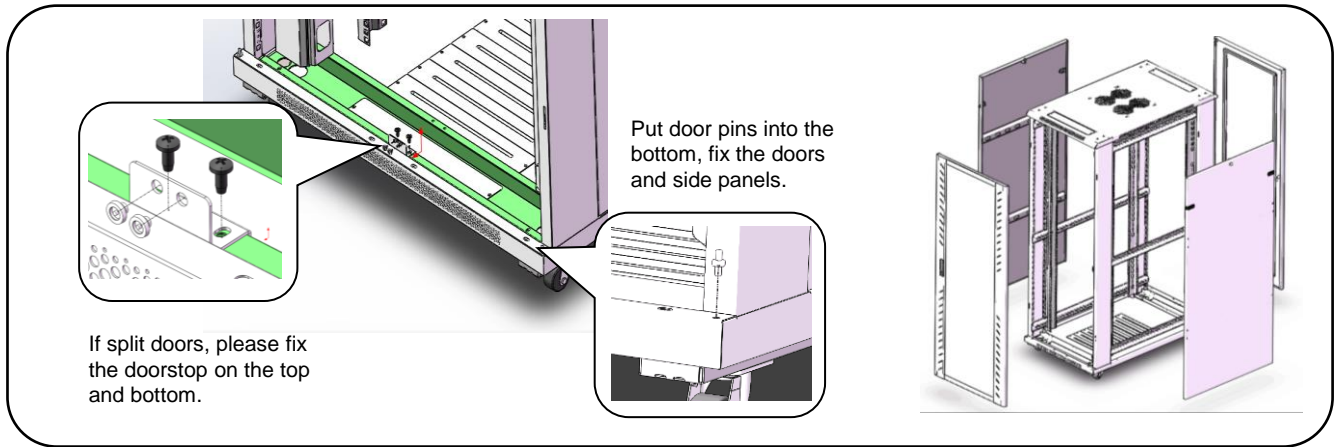

Put door pins into the bottom, fix the doors and side panels.

If split doors, please fix the doorstop on the top and bottom.

Step 4: Fix the lock on the door;

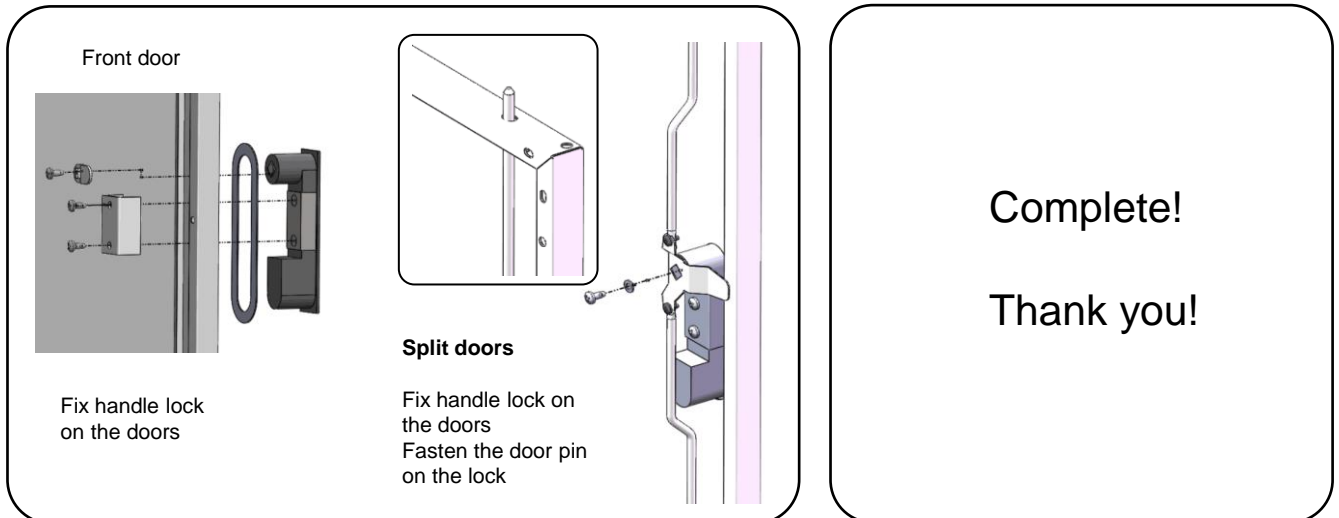

Front door

Fix handle lock on the doors

Split doors

Fix handle lock on the doors
Fasten the door pin on the lock

Complete!
Thank you!